



# Plastic Tray Wheelbarrow

Assembly Manual




Estimated Assembly  
Time: 20 Minutes

# WHEELBARROW ASSEMBLY

## TOOLS REQUIRED

- 14mm Extended socket
- 14mm Spanner
- Sticky Tape

## PARTS INCLUDED

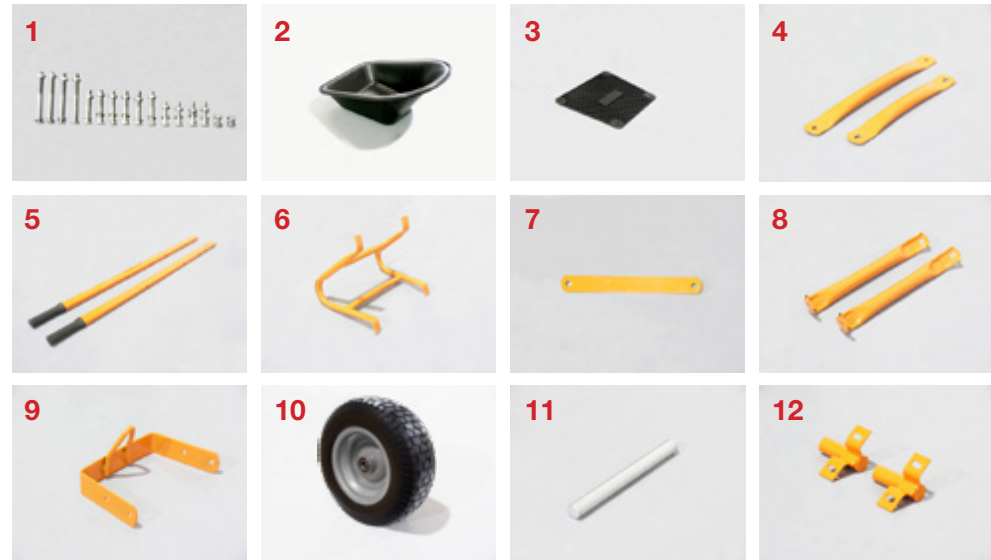

### M8 BOLTS

S1 = 20mm    S3 = 65mm  
S2 = 45mm    S4 = 100mm



**Note:** When assembling bolts the correct order is to:

1. Place bolt through material
2. Put flat washer on the bolt
3. Place spring washer on top of flat washer.
4. Finally place nut over both the flat washer and Spring washer

## WHEELBARROW ASSEMBLY



### Step 1.

Place S4 bolts in the four bottom holes inside the tub (2).



### Step 2.

Once inserted place a strip of sticky tape over each bolt in order to hold the bolt in place.



### Step 3.

Once sticky tape is placed over the bolt, rotate the tub upside down.



### Step 4.

Place Support Mat (3) on tub with the flat side away from the tub as shown.



### Step 5.

Once the mat is in position, place the support struts (4) on the bolts as shown on the right.



### Step 6.

Place Handles (5) on the bolts.

**Note:** There are dints on one side of the handles; have these dints touching the support struts.

## WHEELBARROW ASSEMBLY



### Step 7.

Place stand (6) in place.



### Step 8.

Secure the bolt with washer, spring washer and the nut.




### Step 9.

Place S1 bolts through the remaining holes located at the front of the tub.

### Step 10.

Secure the bolt with washer, spring washer and the nut

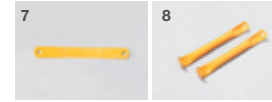

### Step 11.

Place metal support (7) through the S1 bolts.



### Step 12.

Place front support arms (8) through S1 bolts as well.



### Step 14.

Attach support arms to the handles using S3 bolts.

### Step 15.

Secure the bolt with washer, spring washer and the nut.

**Note:** Bolts must be inserted upwards to ensure the bolt is the correct way up.

## WHEELBARROW ASSEMBLY



### Step 16.

Attach nose guard (9) to handles using S2 bolts.

### Step 17.

Secure the bolt with washer, spring washer and the nut.



## WHEELBARROW ASSEMBLY



### Step 18.

Place shaft (11) through the wheel (10).



### Step 19.

Slide the wheel supports (12) on both sides of the shaft.



### Step 20.

Place wheel assembly on top of the handles (5) and secure with S3 bolts.



### Step 21.

Secure the bolt with washer, spring washer and the nut.

When tightening the wheel supports, align them evenly so the wheel is centered. Once the wheel is in place, all other bolts can be tightened.

**Note:** With the wheelbarrow in the upright position, all bolts should be facing downwards (or inwards in the case of the nose guard).